


# TECHNICAL INSTRUCTION

## Configuration and storage of IP settings – ISC-CM Plus

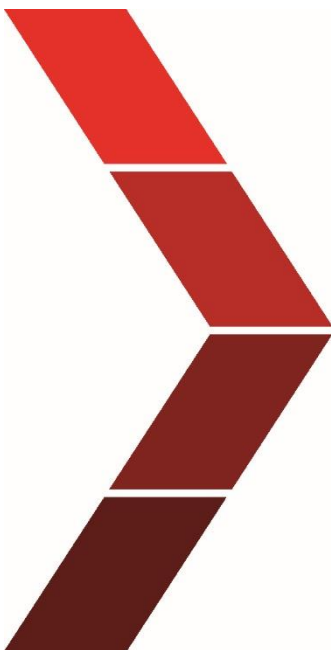


### Description

---


The technical instruction describes the step-by step process to configurate and store the IP settings of the ISC-CM Plus.

---


Step 1 Use user level 4. Code **08434**. Pressbutton Installation configuration on the bottom left.

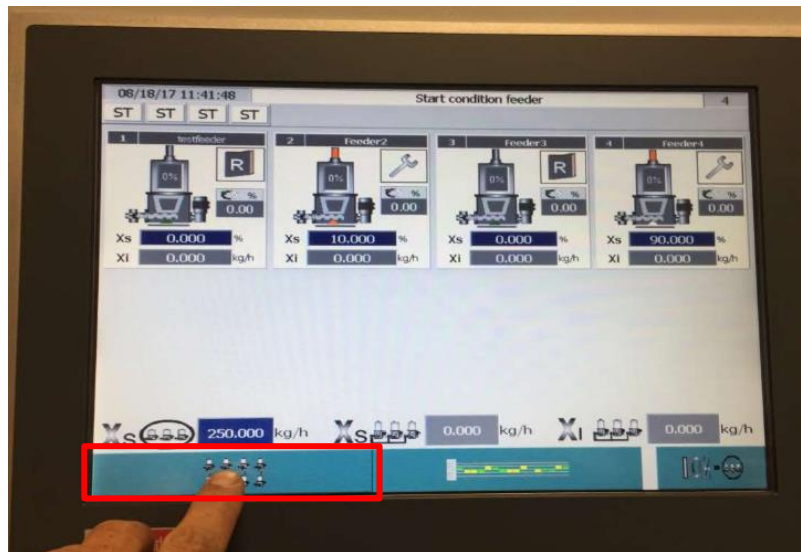


Step 2 Press button service configuration

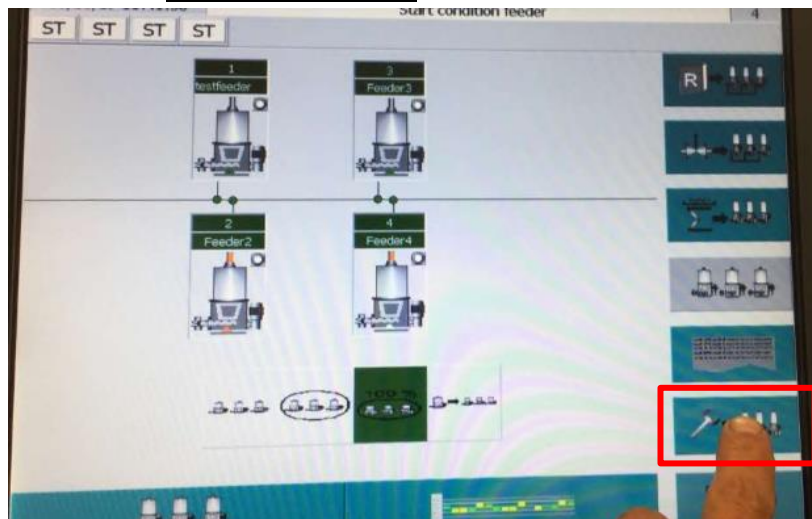


Step 3 Press button Field-Bus

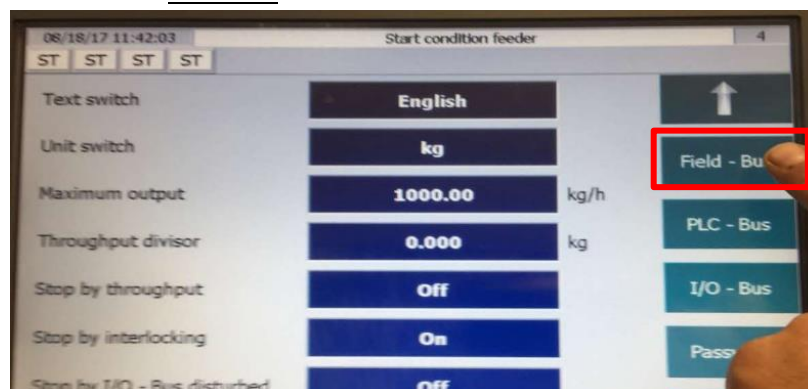


Step 4 Press Feeder 1

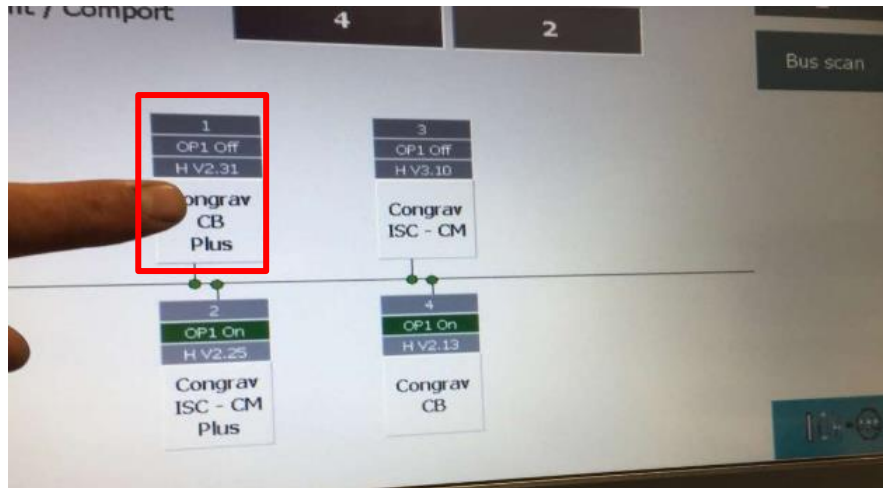


Step 5 Press Setup

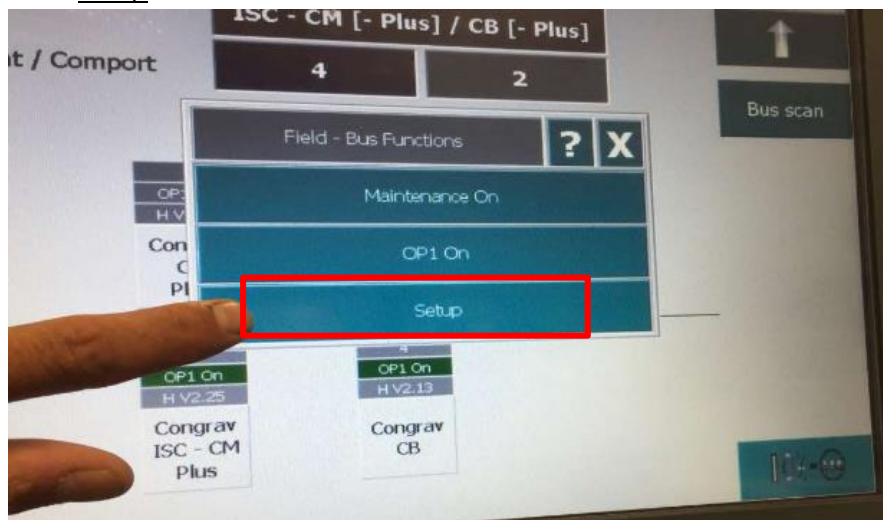


Step 6 Press number 1

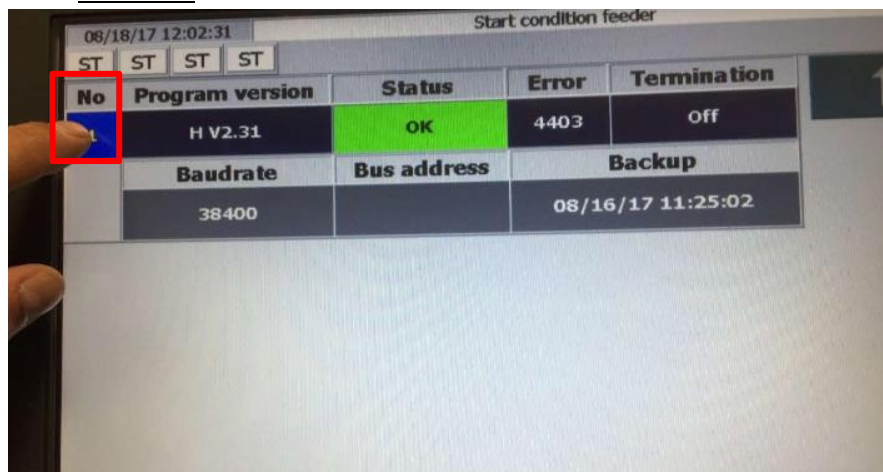


Step 7 Press ISC-CM Plus Configuration

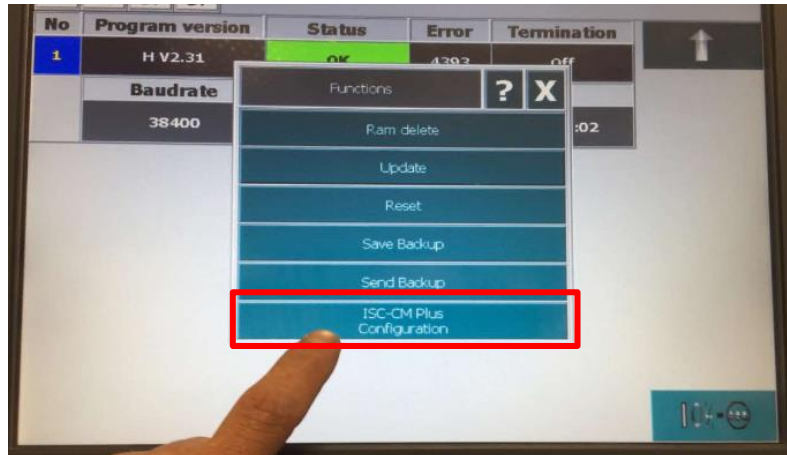

Step 8

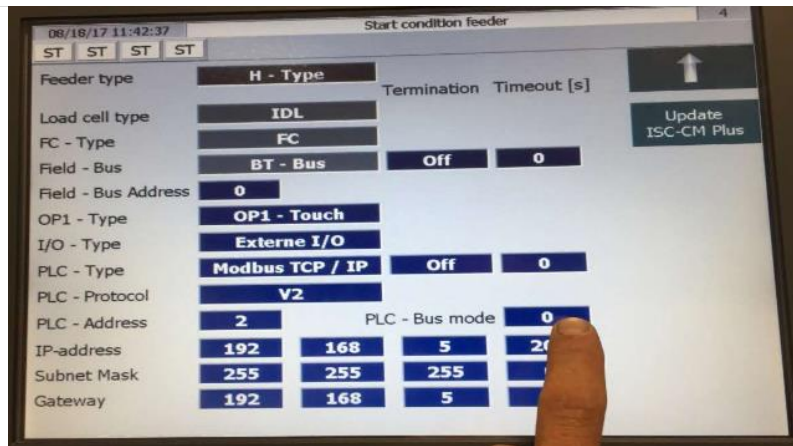

Step 9

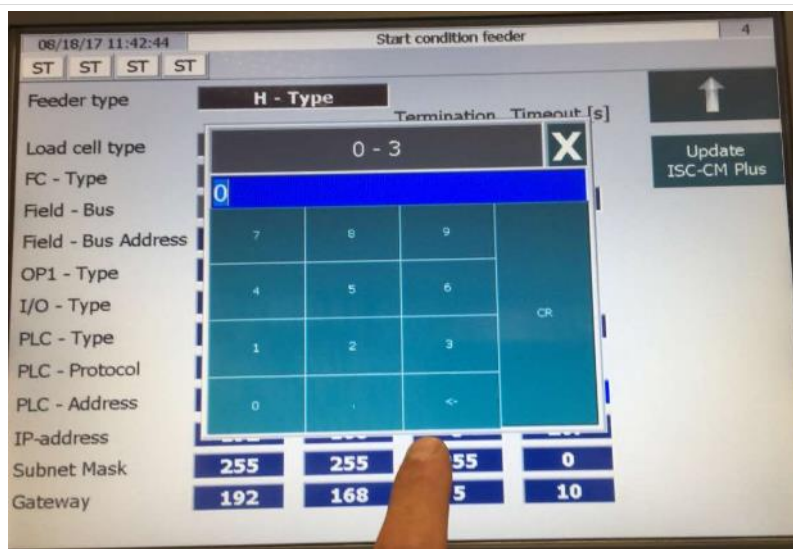

Step 10

Press button Update ISC-CM Plus. Then the configuration is stored.

