

TECHNICAL INSTRUCTION

Operation – AIO Control



Description

The technical instruction describes the step-by step process to operate the AIO control.

Steps	<ol style="list-style-type: none"> 1. open AIO Control 2. open main menu 3. open user administration 4. open Brabender Service 5. select functions 6. login - enter password of user level 4 7. open main menu 8. open system parameterization 9. open line functions 10. stop communication 11. open line function again and execute a bus scan 12. Activate Apply all devices
Additional steps	<p>If the message <u>Device out of IP range</u> appears, the IP address of the laptop must be changed.</p> <p>Exit AIO Control. AIO Control then briefly displays a window with the IP address that must be assigned to the laptop, e.g. IP range devices: 172.16.8.1 - 172.16.8.7.</p> <p>According to AIO Control in this case set IP 172.16.8.8.</p>