

TECHNICAL INSTRUCTION


Current software version – OP12, 15, 16




Description

The technical instruction describes the step-by step process to display the current software version of the OP12, OP15 and OP16.


Step 1 Press Start button

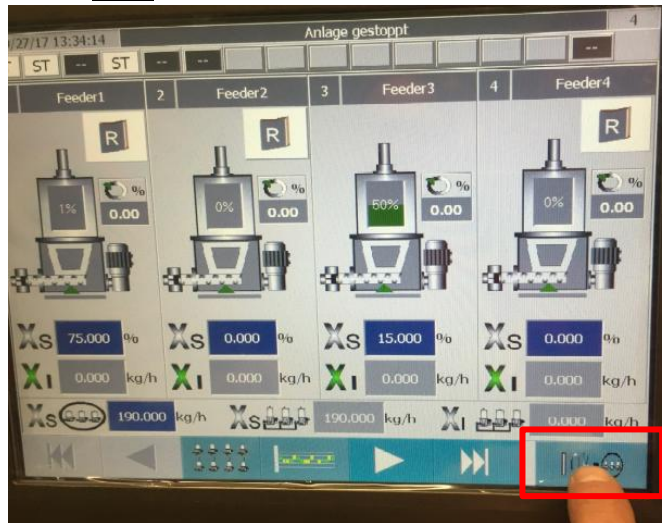

Step 2 Press key button

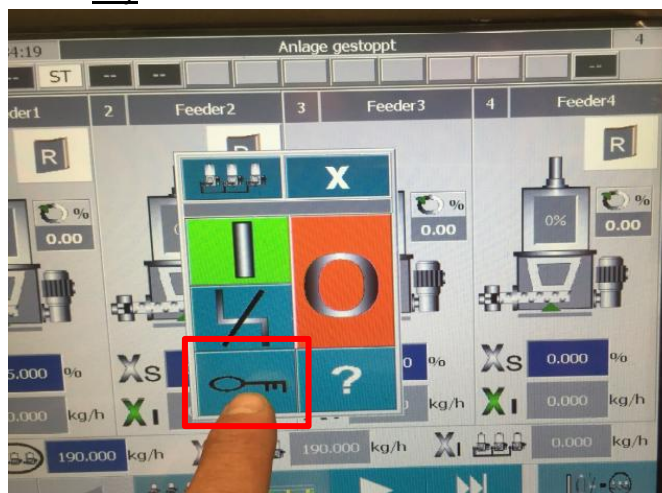

Step 3 Type in code 1.1.1.1 and press enter

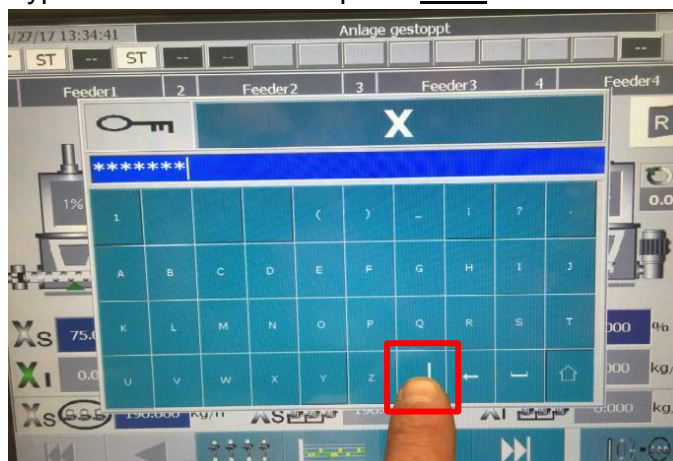

Step 4

You will find the current software version and date on the right side.

