

TECHNICAL INSTRUCTION


Configuration and storage of IP settings – ISC-CM Plus




Description

The technical instruction describes the step-by step process to configure and store the IP settings of the ISC-CM Plus.


Step 1 Enter the code for user **level 4**. Pressbutton Installation configuration on the bottom left.

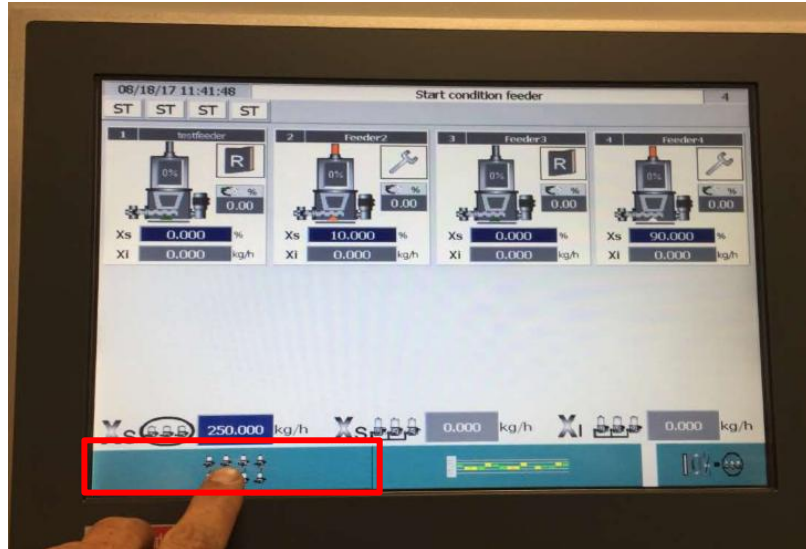


Step 2 Press button service configuration

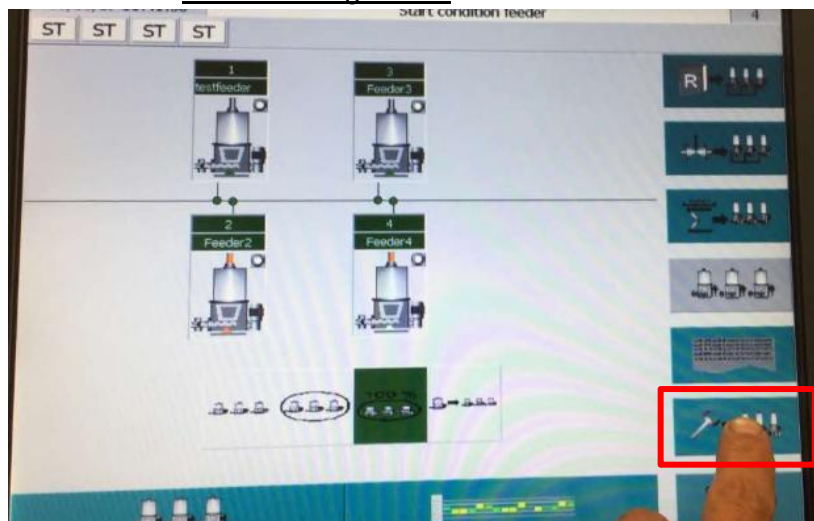


Step 3 Press button Field-Bus

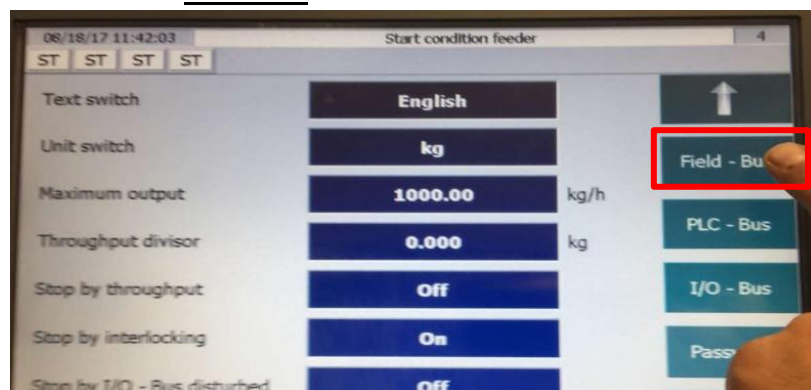

Step 4 Press Feeder 1

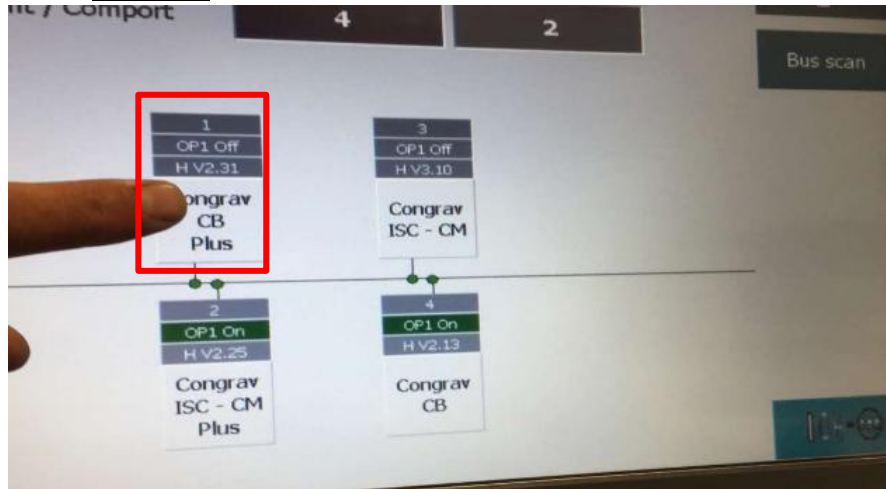


Step 5 Press Setup

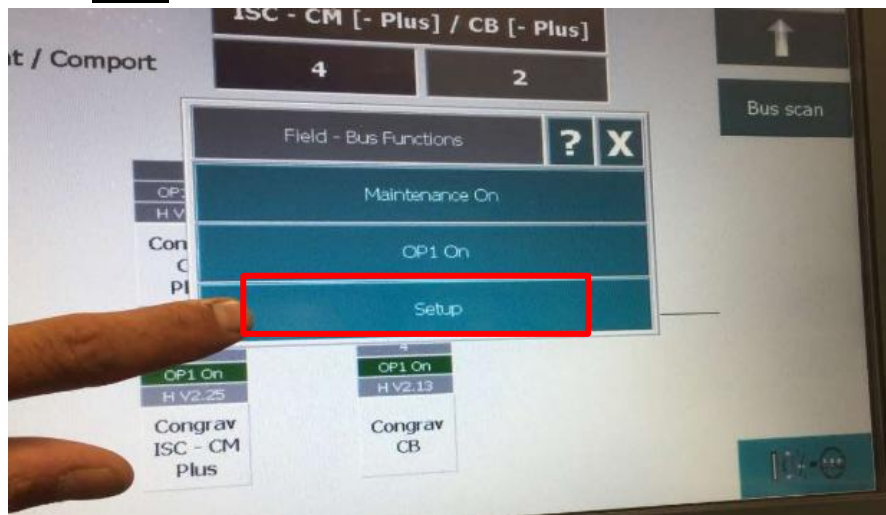


Step 6 Press number 1




Step 7 Press ISC-CM Plus Configuration

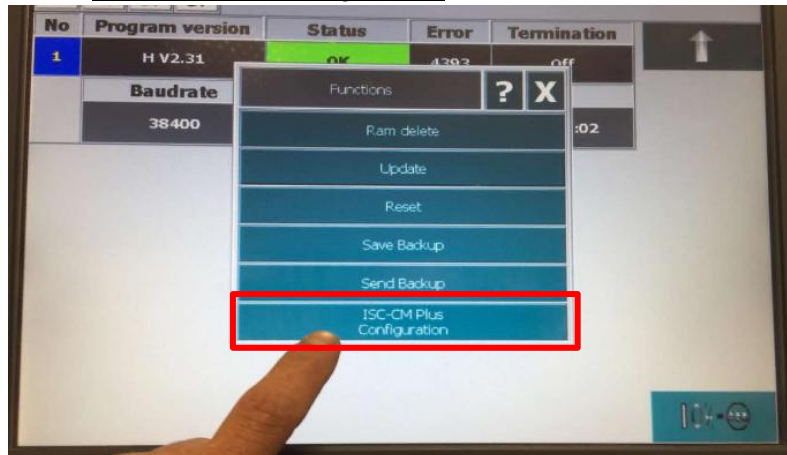

Step 8

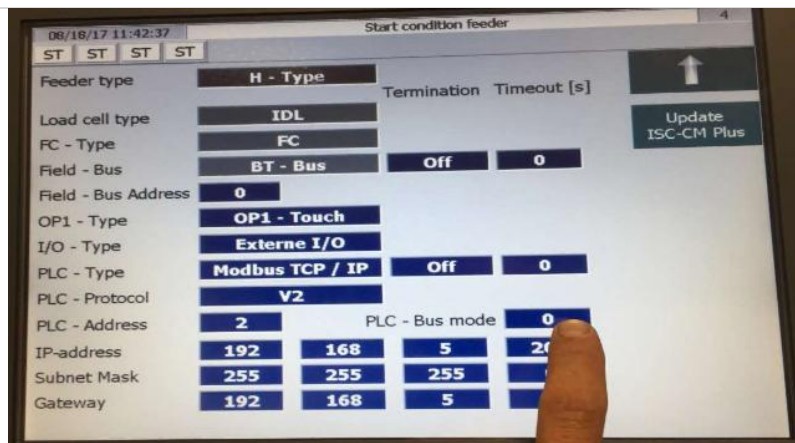

Step 9

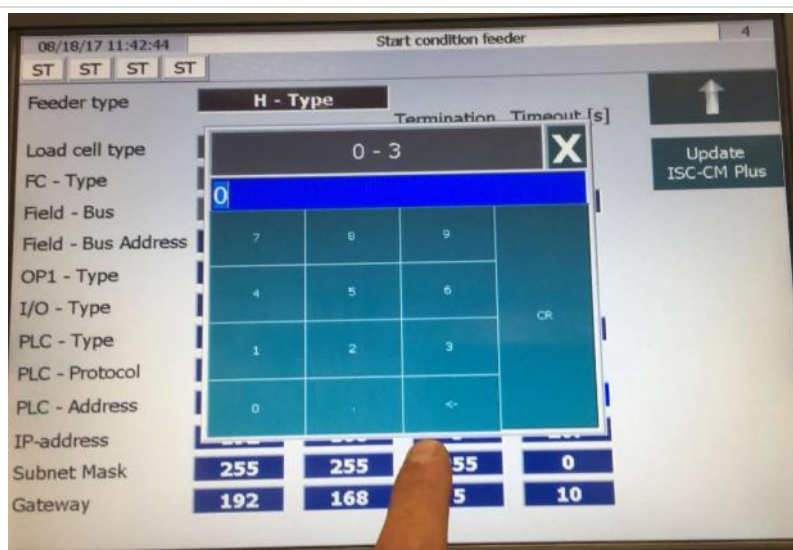

Step 10 Press button Update ISC-CM Plus. Then the configuration is stored.

