

TECHNICAL INSTRUCTION


Maintenance - Scale




Description

The technical instruction describes the step by step process to conduct the maintenance of the scale of our devices.


Step 1 Press the button on the bottom right

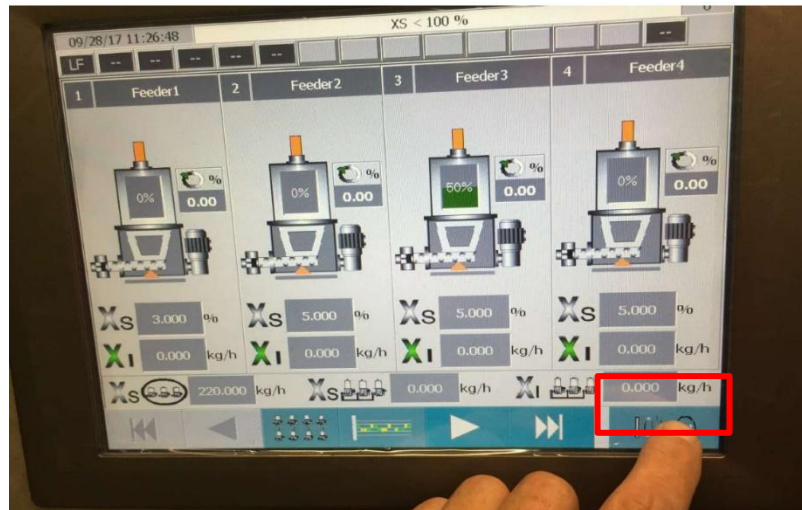


Step 2 Press the key button

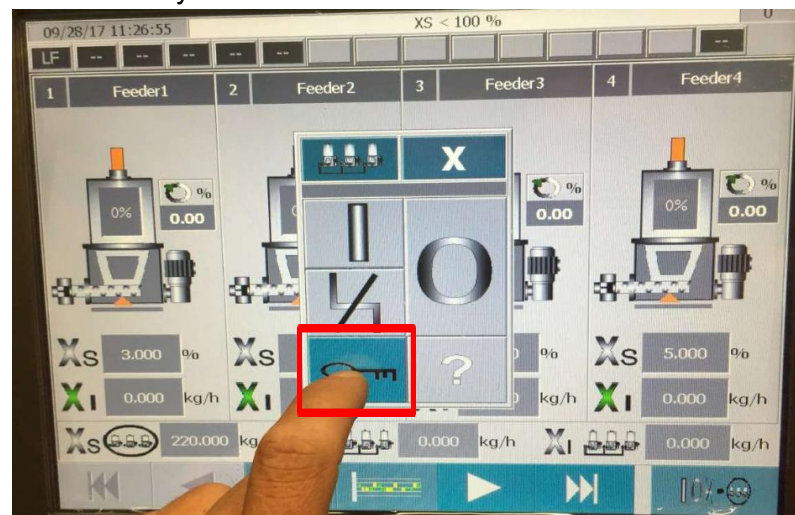


Step 3 Type in the code for **user level 4** and press Enter button

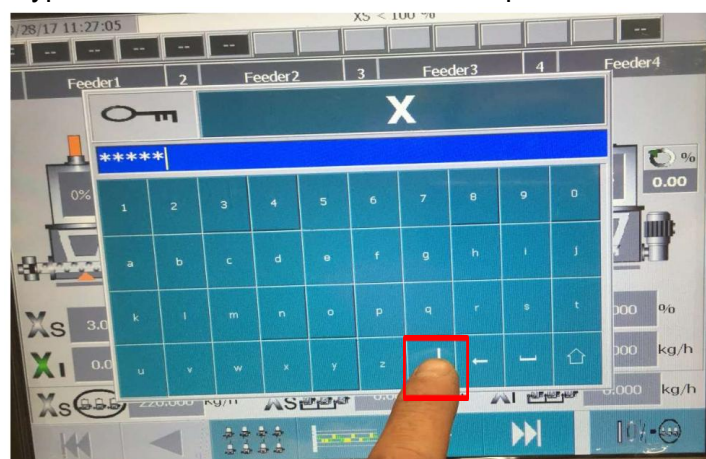


Step 4 Press plant configuration button

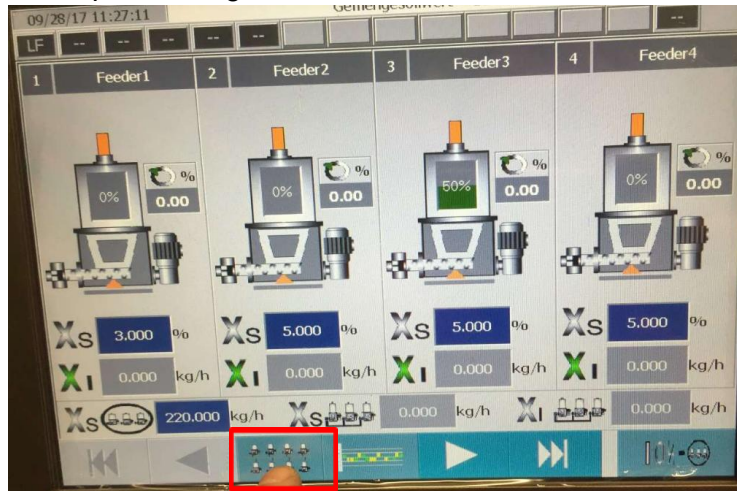


Step 5 Press service level for plant configuration

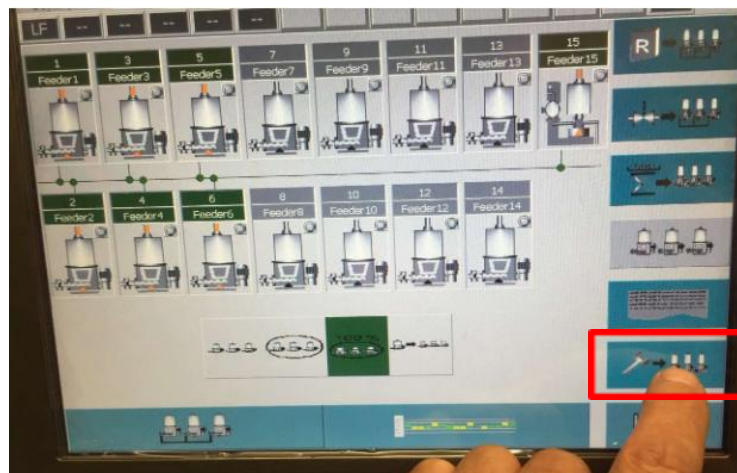


Step 6 Press Feld-Bus button

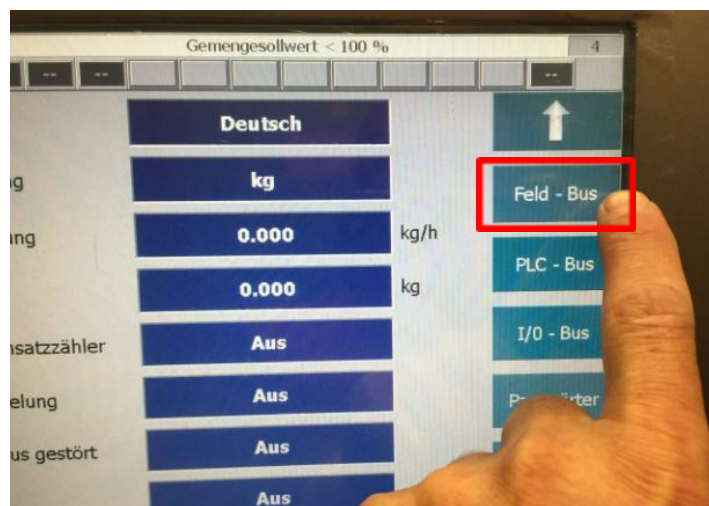


Step 7 Choose component, e.g. 1

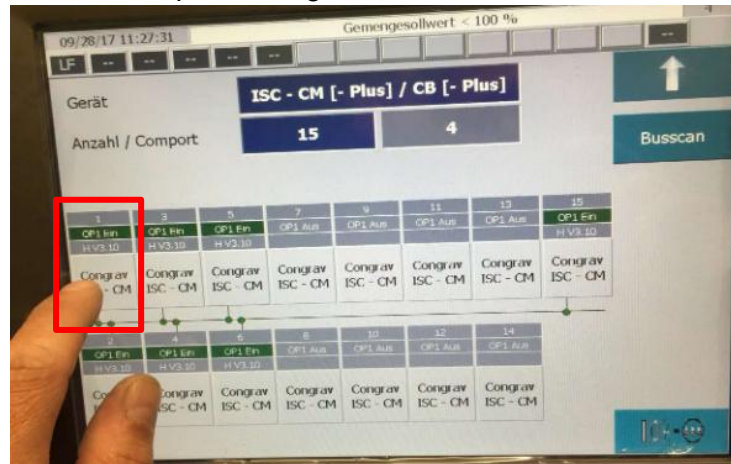


Step 8 Press the number on the left

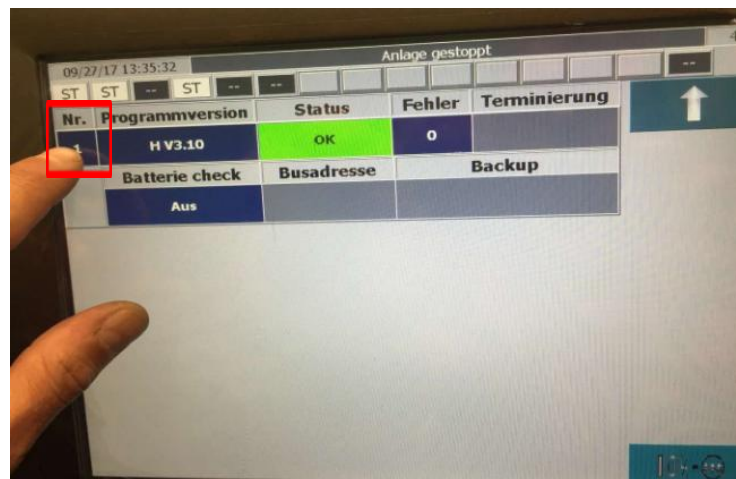


Step 9 Press Maintenance On (Wartung ein)

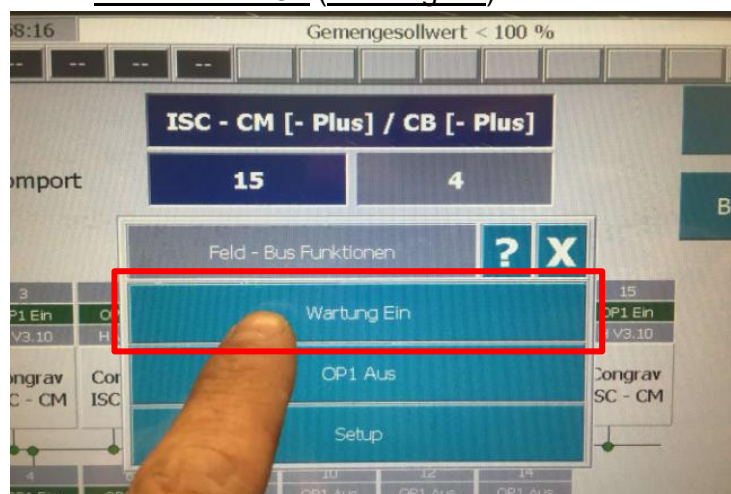

Step 10 Press the arrow pointing to the top to go back

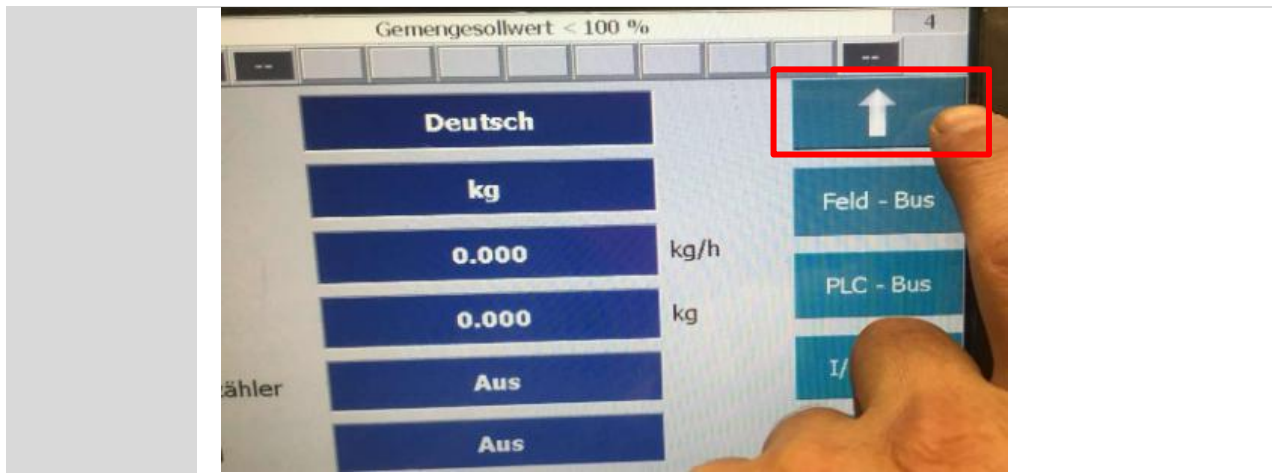

Step 11 Now you can see that scale 1 is gray and has no connection to the fieldbus

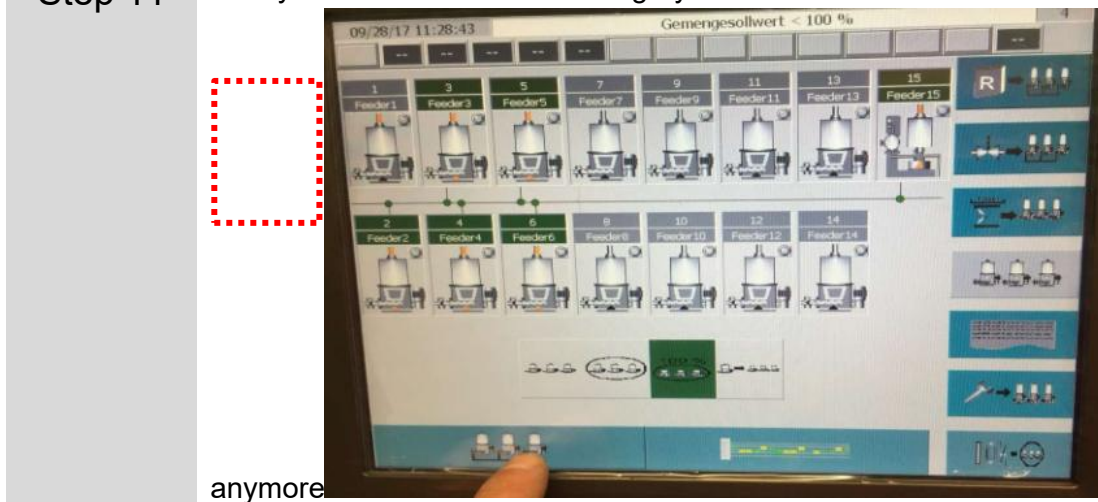

anymore

Important!

If a scale is disconnected from the fieldbus, maintenance must be activated beforehand. Otherwise there will be a malfunction in the fieldbus communication!