

TECHNICAL INSTRUCTION

Program update Congrav® OP-S



Description

The technical instruction describes the step-by-step process to perform the Program Update on the Congrav® OP-S

Step 1 Remove the connecting cable from the back of the Congrav®OP-S to de-energize it


Step 2 Open the cover plate on the bottom of the Congrav®OP-S device



Step 3 Unlock the Micro SD card by applying light pressure (spring mechanism) and then remove it



Step 4 Read Micro SD card via PC => ADAPTER !!

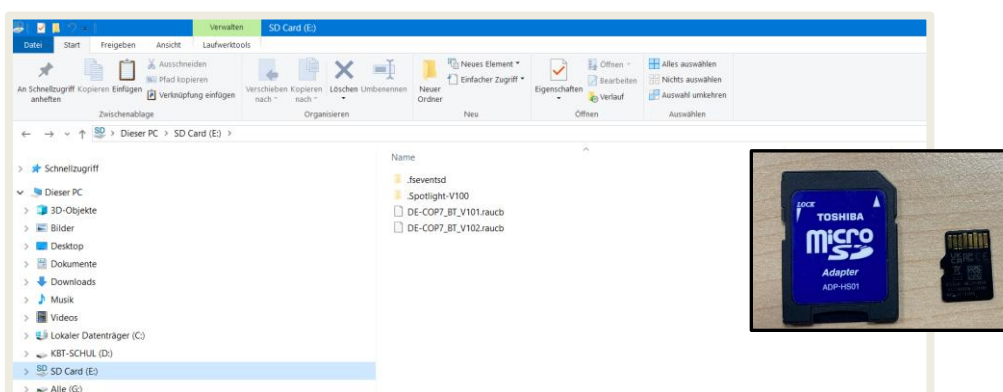

- Step 5** Transfer new program status to the Micro SD card using "Copy and Paste"
- If necessary, delete old program states.
 - Attention: No more than 2 program booths possible!

- Step 6** Carefully insert the Micro SD card back into the Congrav®OP-S device


- Step 7** Reassemble the cover plate on the Congrav®OP-S device to restore device safety / protection

- Step 8** Reconnect the device Congrav®OP-S and wait for the boot routine, that may take a moment


- Step 9** Set Congrav®OP-S to **user level 3**.
To do this, enter the code for **user level 3**.




- Step 10** Open "Burger Menu"

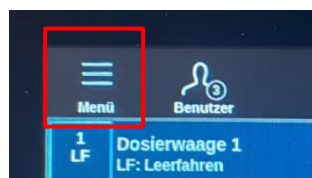

- Step 11** Select "Update"

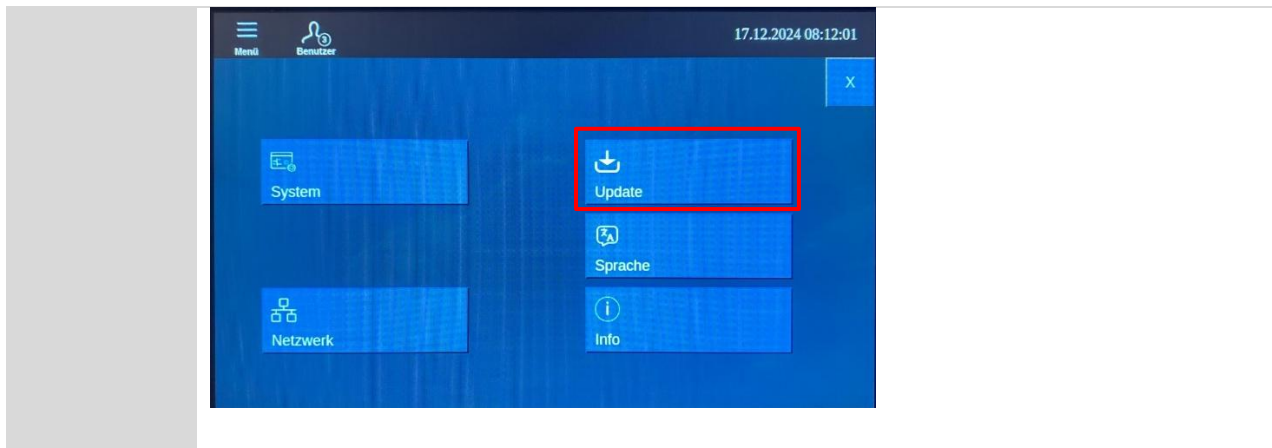

Step 12 Select the new program status and then click "Run."

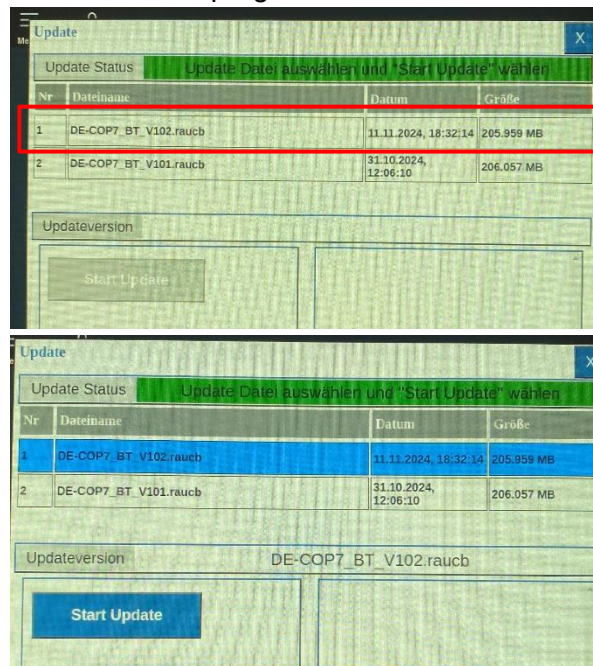

Congrav®OP-S loads new program and restarts ("Note screen information!")